

# INCONCERT

## User's Guide



### Speaker Set-Up

1. Open the battery compartment located on the bottom of the unit.
2. Insert 4 "AA" batteries, and make sure that the polarity +/- ends of the batteries match the engraving inside the battery compartment. **DO NOT** mix different types of batteries together. **DO NOT** mix new and used batteries together.  
*NOTE: The Audio Station WILL NOT charge your iPod when only batteries are used.*

### Using AC adapter

1. Plug the AC adapter into the "DC IN" jack located on the back of the unit.
2. The AC adapter powers the speaker and also charges your 2nd generation iPod shuffle.

**dreamGEAR®**

P.O. BOX 478  
Torrance, CA 90508

FOR TECHNICAL SUPPORT  
PLEASE CONTACT: 1-877-999-DREAM  
or visit us on the web @ [www.isound.net](http://www.isound.net)

### Power "ON" the speaker

1. Press the ON/OFF button to power the speaker "ON" and "OFF".

### Using your AudioStation:

1. Press the iPod shuffles play button to begin listening to music. Note: The iPod shuffle will dock on the AudioStation upside down. This is normal and is caused by the location of the shuffles audio jack.

### Charging iPod Shuffle 2nd generation

1. Connect the AC adapter.
2. Turn the iPod shuffle's power off.
3. Power "OFF" the AudioStation.
4. Dock the shuffle on to the AudioStation.
5. The LED indicator on the shuffle turns orange when charging.
6. The LED indicator on the shuffle turns green when fully charged.

### Connecting non-iPod models

1. Connect a 3.5mm audio cable to your audio device, and the other end to the AUX IN located on the back of the AudioStation.
2. Your audio device is used to make selections.

*Note: The AudioStation can ONLY charge iPod shuffle second generation models.*